
PL-D720 Timing Diagram

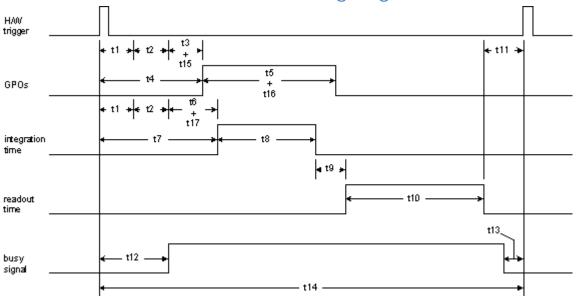

| Signal | Description | Min | Тур | Max |
|----------|-----------------------------|---------------------|----------------------|--------------|
| | Board Level | | 10 ns | |
| | hardware | | | |
| | propagation delay | | | |
| t1 | (3.3V HCMOS to | | | |
| | trigger) | | | |
| | Enclosed hardware | | 8 us ON | |
| | propagation delay | | 30 us OFF | |
| | (5V to trigger | | (Note 1) | |
| | optocoupler) | | | |
| | Enclosed hardware | | 2.5 us ON | |
| | propagation delay | | 40 us OFF | |
| | (12V to trigger | | (Note 1) | |
| | optocoupler) | | | |
| t2 | Debounce time | 1.0 us | 1 us | 1.0 us |
| t3 | Programmable GPO | 0.0 us | in 10 us steps | 2.5 sec |
| <u>.</u> | delay | | | |
| t4 | Start of trigger to | | 9.0 us | |
| | start of GPO | | | |
| 15 | (t1 + t2 + t3 + t15) | 10.0 | 10toma | 25 |
| t5 | Programmable GPO | 10.0 us | in 10 us steps | 2.5 sec |
| t6 | time Programmable | 0.0 us | in 10 us steps | 2.5 sec |
| ισ | integration delay | 0.0 us | III 10 us steps | 2.3 SEC |
| t7 | Start of trigger to | | 25.0 us | |
| | start of integration | | (Note 2) | |
| | (t1 + t2 + t6 + t17) | | (1,000 2) | |
| t8 | Integration time | 50.0 us | in 50 us steps | 3.27 sec |
| t9 | End of integration | | 93.9355 us | |
| | to start of read out | | | |
| t10 | Read out time | | See Readout Times | |
| t11 | End of read out to | 100 ns (no updates) | depends on updates | 1.0 ms (with |
| | start of trigger | ` . | | updates) |
| t12 | Start of trigger to | | t1 + t2 | |
| | start of busy | | | |
| t13 | End of busy to start | | 25.0 ns | |
| | of trigger | | | |
| t14 | Frame period | | t7 + t8 + t9 + t10 + | |
| | | | t11 | |
| | Board Level | | 20 ns | |
| t15 | hardware | | | |
| & | propagation delay | | | |
| t16 | (3.3V HCMOS | | | |
| | from GPO) Enclosed hardware | | 3 us ON | |
| | propagation delay | | 70 us OFF | |
| | (GPO optocoupler | | (Note 1) | |
| | with 1K pullup to | | (INOIC I) | |
| | 5V) | | | |
| t17 | Global shutter setup | | 11.5 us | |
| (1) | time | | 11.0 4.0 | |
| Notoci | | <u> </u> | | |

Notes:

- 1. "ON" refers to current flowing through the optocoupler and "OFF" refers to no current flowing through the optocoupler. Refer to interface schematics.
- 2. For minimum hardware trigger, the programmable trigger (t6) should be set to 0 (minimum). For a software trigger, t7 = 1.7 ms typical.